

# SnapSat™ -Ip

## Quick Reference Guide




**Snap a photo:**


1. Select **ON** to power on SnapSat™ -Ip.  
\*Default photo quality is low quality (320x240). To select high quality photo (640x480), press and hold **SELECT** during SnapSat™ -Ip power on.
2. If **GPS** enabled, hold light steady until **GPS** light is on solid.
3. Select Camera mode [0]
4. Point bottom of SnapSat™ -Ip at subject (camera field of view is 45 degrees to each side) to snap a photo
5. Press **CALL-SEND**, wait for **Status** light to stop flashing to capture the image.  
- **Status** light flashing = saving  
- **Status** light solid = ready





**HELP?**  
info@comm-n-sense.com      561-625-7977




**1. Remove battery cover and battery**



**2. Install power clip**

**3. Install pin cover and replace battery**



**4. Attach SnapSat™ -Ip**



**Transmit a photo:**

1. Select **Tx** mode
2. Press **SELECT** to scroll for photo to send
3. Press **CALL-SEND** to dial number stored in "num.txt" file on memory card
4. Confirm solid green **Connection** and solid yellow **Status** lights  
- **Status** light flashing = sending  
- **Status** light solid = ready
5. Press **CALL-SEND** to transmit selected photo  
- **Status** light flashing = sending  
- **Status** light solid = ready

**Delete a photo:**

1. Select **photo** mode
2. Press **SELECT** to scroll for photo to delete
3. Press **DELETE** to delete current selected photo.  
\*Storage slot is now available for a new photo. Open storage slots can be scrolled in camera mode by using the **SELECT** button